HR5 Headrail

12mm +



Does not include fixings		
Panel thickness	ANODISED	РРС
1.0M LENGTH 12mm +	HR5A1	HR5P1
3.0M LENGTH 12mm +	HR5A3	HR5P3
4.0M LENGTH 12mm +	HR5A4	HR5P4

- 1. Once the fascia's and partitions are erected the headrail can be fitted.
- 2. Measure the cubicle runs and ensure that any headrail joins are in the middle of fascia's and not on door openings.
- 3. The headrail should be fitted to the top and outside face of the fascia's.
- 4. Fix the headrail to the Plumb end fascia using either method A or B shown below.
- 5. Once fitted work along the cubicle run ensuring each fascia and doorway is parallel then fix in place with the headrail.

